

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## Product information

Power consumption	: 85 W
Voltage, Frequency	: 230 V, 50 Hz
Cord length	: 120 cm
Noise level	: 60 dbA
Sieve	: Plastic
Colour	: Ceramic white

## Dimensions & weight

Product	: 220 x 220 x 235 mm	1,9 kg
F - box	: 265 x 265 x 285 mm	2,4 kg

## Service Information

To dismantle the appliance pull- of the drive spindle **Item 8** and remove the 3 screw covers with care **item 9** and loosen the Torx screws.  
Use herewith Torx screwdriver no. T15 which is one of a set consisting of:  
T20, T15, T10, T9, T8, T7 and T6 = 4822 395 50145

Product meets the requirements regarding interference suppression on radio and TV.

After the product has been repaired, it should function properly and has to meet the safety requirements as laid down officially established at this moment.



1	4203 065 61610	Gearbox
2	4203 065 61620	Switch
3	4203 065 61630	Drive gear wheel
4	4203 065 61640	Motor
5	4203 065 61650	Housing bottom assy
6	4203 065 61660	Flex
7	4203 065 58450	Stud
8	4203 065 61680	Drive spindle
9	4203 065 61690	Screw cover
10	4203 065 61700	Housing top assy
11	4203 065 61710	Cover
12	4203 065 61720	Dust cover
13	4203 065 61730	Press cone
14	4203 065 61750	Plastic sieve assy
15	4203 065 61760	Tray assy
16	4203 065 61780	Spring
17	4203 065 61770	Spourt assy

Direction for use 4203 064 11220 W. Europe

<b>West Europe</b>	
English	Norwegian
German	Danish
French	Swedish
Dutch	Finnish
Portuguese	Turkey
Spanish	Greec
Italian	

