

Service  
Service  
Service



Philips Domestic Appliances and Personal Care

# Service Manual

## PRODUCT INFORMATION

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements as officially laid down at this moment.

## TECHNICAL INFORMATION

- Voltage : 220 - 240 V
- Frequency : 50 - 60 Hz
- Power consumption : 800 W
- Coloursetting : HD2521/10 : White / mineral green  
HD2521/51 : Dutch blue  
HD2521/52 : White / Sunny Yellow
- SAP coding : HD2521

## REPAIR INSTRUCTIONS


In case of a technical defect, toaster has to be replaced.  
Only crumb tray and Lid have been listed as spare parts.

## ASSEMBLY & DISASSEMBLY ADVICE

- No specific issues

## OPTIONAL (accessories)

- No specific issues

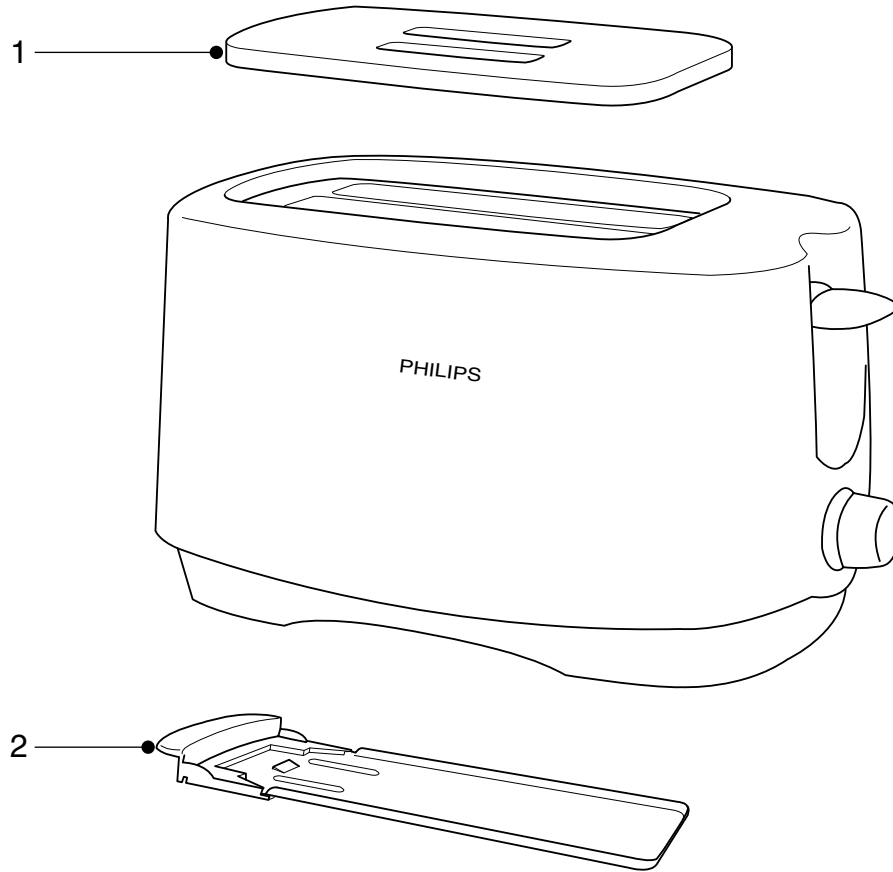

Pos	Service code	Description	
1	9965 000 21060	Lid	White
2	9965 000 21059	Crumbtray	Sunny yellow
	9965 000 21057	Crumbtray	Mineral green
	9965 000 21058	Crumbtray	Dutch blue