

Service
Service
Service




Philips Domestic Appliances and Personal Care

Service Manual

Service Manual 4822 723 21587 herewith cancels.

GENERAL

For this type number **no spare parts** will be available in the after sales period. When the product is defective, it has to be replaced.

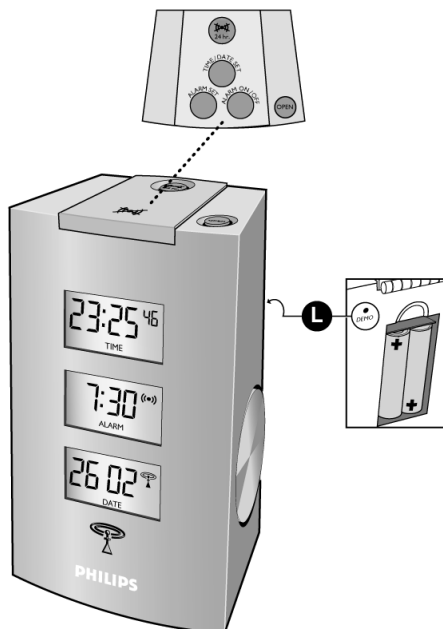

POSSIBLE COMPLAINTS:

If the clock should not receive the radio time transmissions, this may be caused by:

- the radio function has been switched off deliberately by keeping the DEMO button **L** pressed down for longer than 10 seconds;
(Press shortly to re-enable radio reception)
- the distance to the transmitter is more than approx. 1500 kilometers;
- the radio transmission is disturbed by a switched-on TV, radio, computer monitor, microwave oven, etc.;;
(Move and/or turn the clock until reception is satisfactory.)
- the transmitter has been put out of operation (for service or due to bad weather) or is out of order;
- radio reception is affected negatively due to metal shielding, such as sunblinds, aluminium panelling, reinforcing steel in concrete.
(Move and/or turn the clock until reception is satisfactory. If possible, place the clock near a window looking out in the direction of the transmitter. Let it remain there overnight: during the night there is less disturbance.)
- radio reception is disturbed as a result of atmospheric conditions. ("Noise", "disturbance" due to storm and/or thunder.)

