

**Pioneer**

# Service Manual

ORDER NO.  
CRT2491

MULTI-CD CONTROL HIGH POWER CD PLAYER WITH RDS TUNER

# DEH-P5100R X1B/EW,X1P/EW

# DEH-P5100R-W X1BEW,X1PEW

# DEH-P5100R-B X1BEW,X1PEW

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech. Module	Remarks
DEH-P5100R/X1N/EW	CRT2466		

## EXPLODED VIEWS AND PARTS LIST

PACKING (Page 3)

### ● PACKING SECTION PARTS LIST

\*: Non Spare Part

Mark No.	Description	Part.No		
		DEH-P5100R/X1N/EW	DEH-P5100R/X1B/EW	DEH-P5100R/X1P/EW
	2 Accessory Assy	*CEA2397	UEA2397	UEA2397
*	6 Polyethylene Bag	E36-615	CEG-127	CEG-127
	7 Polyethylene Bag	CEG-162	UEG-012	UEG-012
	8-1 Polyethylene Bag	CEG1116	UEG1116	UEG1116
	8-2 Owner's Manual	CRD3146	URD-138	URD-138
	8-3 Owner's Manual	CRD3147	URD-139	URD-139
	8-4 Owner's Manual	CRD3148	URD-140	URD-140
	8-5 Installation Manual	CRD3149	URD-141	URD-141
*	8-6 Passport	CRY1013	CRY1014	CRY1014
*	8-7 Warranty Card	CRY1157	URY1087	URY1087
	9 Case Assy	CXB3520	UXB-009	UXB3520
	10 Carton	CHG4001	UHG4001	UHG-133
	11 Contain Box	CHL4001	UHL4001	UHL-075
	12 Protector	CHP2251	UHP2251	UHP2251
	13 Protector	CHP2252	UHP2252	UHP2252
	14 Inner Box	CHW1754	UHW1754	UHW1754

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.  
**PIONEER ELECTRONIC N.V.** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 253 Alexandra Road, #04-01, Singapore 159936

EXPLODED VIEWS AND PARTS LIST

PACKING (Page 3)

● PACKING SECTION PARTS LIST

\*: Non Spare Part

Mark No.	Description	Part.No		
		DEH-P5100R-W/X1NEW	DEH-P5100R-W/X1BEW	DEH-P5100R-W/X1PEW
	2 Accessory Assy	*CEA2397	UEA2397	UEA2397
*	6 Polyethylene Bag	E36-615	CEG-127	CEG-127
	7 Polyethylene Bag	CEG-162	UEG-012	UEG-012
	8-1 Polyethylene Bag	CEG1116	UEG1116	UEG1116
	8-2 Owner's Manual	CRD3146	URD-138	URD-138
	8-3 Owner's Manual	CRD3147	URD-139	URD-139
	8-4 Owner's Manual	CRD3148	URD-140	URD-140
	8-5 Installation Manual	CRD3149	URD-141	URD-141
*	8-6 Passport	CRY1013	CRY1014	CRY1014
*	8-7 Warranty Card	CRY1157	URY1087	URY1087
	9 Case Assy	CXB3520	UXB-009	UXB3520
	10 Carton	CHG4002	UHG4002	UHG-134
	11 Contain Box	CHL4002	UHL4002	UHL-076
	12 Protector	CHP2251	UHP2251	UHP2251
	13 Protector	CHP2252	UHP2252	UHP2252
	14 Inner Box	CHW1754	UHW1754	UHW1754

EXPLODED VIEWS AND PARTS LIST

PACKING (Page 3)

● PACKING SECTION PARTS LIST

\*: Non Spare Part

Mark No.	Description	Part.No		
		DEH-P5100R-B/X1NEW	DEH-P5100R-B/X1BEW	DEH-P5100R-B/X1PEW
	2 Accessory Assy	*CEA2397	UEA2397	UEA2397
*	6 Polyethylene Bag	E36-615	CEG-127	CEG-127
	7 Polyethylene Bag	CEG-162	UEG-012	UEG-012
	8-1 Polyethylene Bag	CEG1116	UEG1116	UEG1116
	8-2 Owner's Manual	CRD3146	URD-138	URD-138
	8-3 Owner's Manual	CRD3147	URD-139	URD-139
	8-4 Owner's Manual	CRD3148	URD-140	URD-140
	8-5 Installation Manual	CRD3149	URD-141	URD-141
*	8-6 Passport	CRY1013	CRY1014	CRY1014
*	8-7 Warranty Card	CRY1157	URY1087	URY1087
	9 Case Assy	CXB3520	UXB-009	UXB3520
	10 Carton	CHG4003	UHG4003	UHG-135
	11 Contain Box	CHL4003	UHL4003	UHL-077
	12 Protector	CHP2251	UHP2251	UHP2251
	13 Protector	CHP2252	UHP2252	UHP2252
	14 Inner Box	CHW1754	UHW1754	UHW1754

EXTERIOR (Page 5)

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part.No	
		DEH-P5100R/X1N/EW	DEH-P5100R/X1B/EW,X1P/EW
10	Holder	CNC6798	UNC6798
16	Tuner Amp Unit	CWM6897	UWM6897
33	FM/AM Tuner Unit	CWE1500	UWE1500
36	Detach Grille Assy	CXB4911	UXB4911
48	Keyboard Unit	CWM6906	UWM6906

EXTERIOR (Page 5)

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part.No	
		DEH-P5100R-W/X1NEW	DEH-P5100R-W/X1BEW,X1PEW
10	Holder	CNC6798	UNC6798
16	Tuner Amp Unit	CWM6898	UWM6898
33	FM/AM Tuner Unit	CWE1500	UWE1500
36	Detach Grille Assy	CXB4912	UXB4912
48	Keyboard Unit	CWM6910	UWM6910

EXTERIOR (Page 5)

● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part.No	
		DEH-P5100R-B/X1NEW	DEH-P5100R-B/X1BEW,X1PEW
10	Holder	CNC6798	UNC6798
16	Tuner Amp Unit	CWM6899	UWM6899
33	FM/AM Tuner Unit	CWE1500	UWE1500
36	Detach Grille Assy	CXB4913	UXB4913
48	Keyboard Unit	CWM6907	UWM6907

ELECTRICAL PARTS LIST (Page 38)

FM/AM Tuner Unit

Symbol and Description	Part No.		
	/X1N/EW,/X1NEW	/X1B/EW,/X1BEW	/X1P/EW,/X1PEW
C915	CKSQYB223K50	CKSQYB223K25	CKSQYB223K25