

Service Manual


AUTOMOTIVE CONSUMER ELECTRONICS

CQ-RD825WLEN/RD825LEN
CQ-RD815/RD811/RD810LEN
CQ-RD815G/RD810GLEN

High-Power Cassette Player/RDS Receiver
RDS Autoradio-Cassettenkombination; High Power



<CQ-RD825LEN>

Dolby noise reduction manufactured under license from Dolby Laboratories Licensing Corporation.
"DOLBY" and the double-D symbol  are trade marks of Dolby Laboratories Licensing Corporation.

■ FEATURES

- 24-Stations Preset (18-FM, 6-AM).
- Radio Data System (PS, AF, CT, PI).
- Dolby B NR Circuit. (CQ-RD825/RD815)
- CD Changer Control. (CQ-RD825/RD815/RD811)
- Electronic Control of Volume, Bass, Treble, Balance and Fader.
- Warning Alarm System.
- Front Panel AUX Jack. (CQ-RD825)
- Detachable Face Plate Security.

■ MERKMALE

- 24 Festsender (18 für UKW, 6 für MW/LW).
- Radiodaten-system (PS, AF, CT, PI).
- Dolby-Rauschunterdrückungssystem des Typs B. (CQ-RD825/RD815)
- CD-Wechsler-Steuerung. (CQ-RD825/RD815/RD811)
- Elektronische Regelung der Lautstärke, Bässe, Höhen, Balance und Überblendung.
- Warnalarmsystem.
- AUX-Eingangsbuchse an der Frontplatte. (CQ-RD825)
- Sicherung für die abnehmbare Stirnplatte.

WARNING

This service information is designed for experienced repair technicians only and is not designed for use by the general public. It does not contain warnings or cautions to advise non-technical individuals of potential dangers in attempting to service a product. Products powered by electricity should be serviced or repaired only by experienced professional technicians. Any attempt to service or repair the product or products dealt with in this service information by anyone else could result in serious injury or death.

Panasonic

©1997 Matsushita Communication Industrial Co., Ltd.
All rights reserved. Unauthorized copying and distribution is a violation of law.

CONTENTS

	Page
FUSE	1
MAINTENANCE	1
ALIGNMENT JIG	1
DIMENSIONS	1
SPECIFICATIONS	2
< OPERATING INSTRUCTIONS >	
Precautions	3
Power and Sound Controls	4, 5
Radio Basics	6, 7
RDS Reception	7~11
Cassette Tape Play Basics	11, 12
CD Changer Basics	13, 14
Remote Control Basics	14
Anti-Theft System	15, 16
Installation	16, 17
Electrical Connection	18
Speaker Connections	19
BLOCK DIAGRAM	36
SCHEMATIC DIAGRAM (DISPLAY)	
< CQ-RD825WLEN/RD815LEN >	37
WIRING DIAGRAM (DISPLAY)	
< CQ-RD825WLEN/RD815LEN >	38
SCHEMATIC DIAGRAM (DISPLAY)	
< CQ-RD 815/811/810LEN, CQ-RD815G/810GLEN >	39
WIRING DIAGRAM (DISPLAY)	
< CQ-RD 815/811/810LEN, CQ-RD815G/810GLEN >	40
TERMINALS DESCRIPTION	40
PACKAGE AND IC BLOCK DIAGRAM	40, 43
SCHEMATIC DIAGRAM (MAIN)	41
WIRING DIAGRAM (MAIN)	42
SCHEMATIC DIAGRAM (TAPE)	43
WIRING DIAGRAM (TAPE)	43
ALIGNMENT INSTRUCTIONS	44
ALIGNMENT POINTS	44
REPLACEMENT PARTS LIST	45~53, 56
EXPLODED VIEW (UNIT)	54
EXPLODED VIEW (TAPE)	55

FUSE

Be sure to use a fuse of the specified rating (RD825: 15A, RD815/RD811/RD810: 10A) when replacing a blown fuse. Fuses with higher capacity ratings, use of any substitute, or connection without a fuse may result in a fire hazard or damage to the unit.


MAINTENANCE

To clean the exterior of this unit, use a soft cloth to wipe the surface. Do not use benzine, thinner, or any other type of solvents.

ALIGNMENT JIG

- DOLBY NR ALIGNMENT ;
Test Tape : RFKZ0038

DIMENSIONS / ABMESSUNGEN

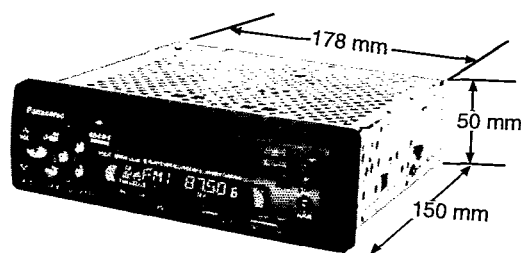

INHALTSUERZEICHNIS

	Seite
SICHERUNG	1
PFLEGE	1
ABGLEICH-SCHABLONE	1
ABMESSUNGEN	1
TECHNISCHE DATEN	2
< BEDIENUNG SANLEITUNG >	
Achtung-sehr wichtig	3
Stromversorgung und Klangregler	20, 21
Rundfunkempfang	22, 23
Radiodatenstystem (RDS)-Empfang	23~27
Cassettenwiedergabe	27, 28
Grundlagen für die Bedienung des CD-Wechslers	29, 30
Grundlagen für Fernbedienung	30
Diebstahlschutz	31, 32
Einbau	32, 33
Elektrischer Anschluß	34
Anschluß der Lautsprecher	35
BLOCK DIAGRAM	36
SCHALTBILT (DISPLAY)	
< CQ-RD825WLEN/RD815LEN >	37
VERDRAHTUNG (DISPLAY)	
< CQ-RD825WLEN/RD815LEN >	38
SCHALTBILT (DISPLAY)	
< CQ-RD 815/811/810LEN, CQ-RD815G/810GLEN >	39
VERDRAHTUNG (DISPLAY)	
< CQ-RD 815/811/810LEN, CQ-RD815G/810GLEN >	40
KLEMMENBESCHREIBUNG	40
PACKEN UND IC BLOCK DIAGRAM	40, 43
SCHALTBILT (MAIN)	41
VERDRAHTUNG (MAIN)	42
SCHALTBILT (TAPE)	43
VERDRAHTUNG (TAPE)	43
ABGLEICH-ANLEITUNG	44
ABGLEICH-PUNKTE	44
ERSATZTEILLISTE	45~53, 56
AUFGELOTE DARSTELLUNGS (GANZES GERÄT)	54
AUFGELOTE DARSTELLUNGS (TONBAND GERÄT)	55

SICHERUNG

Als Ersatz für eine durchgebrannte Sicherung unbedingt eine Sicherung mit dem vorgeschriebenen Nennwert (RD825: 15A, RD815/RD811/RD810: 10A) verwenden. Durch den Gebrauch von Sicherungen mit höheren Nennwerten, von Sicherungsersatzteilen oder durch den Anschluß ohne Gebrauch einer Sicherung kann ein Brand oder Geräteschaden verursacht werden.

PFLEGE

Zur Reinigung das äussere des Gerätes mit einem weichen Tuch abwischen. Auf keinen Fall Benzin, Verdünner oder irgendein anderes Lösemittel verwenden.

ABGLEICH-SCHABLONE

- DOLBY NR ABGLEICH ;
Testband : RFKZ0038

Specifications*

General

Power Supply	: DC 12V (11V - 16V), Test Voltage 14.4V Negative Ground
Tone Controls	: Bass; $\pm 12\text{dB}$ at 100Hz Treble; $\pm 12\text{dB}$ at 10kHz
Current Consumption	: Less than 2.5A (Tape mode, 0.5W 4-Speaker)
Maximum Power Output	: 40W $\times 4$ (at 4 Ω) < RD825 > 35W $\times 4$ (at 4 Ω) < RD815/RD811/RD810 >
Power Output	: 20W $\times 4$ (DIN45 324 at 4 Ω) < RD825 > 14W $\times 4$ (DIN45 324 at 4 Ω) < RD815/RD811/RD810 >
Speaker Impedance	: 4 - 8 Ω

FM Stereo Radio

Frequency Range	: 87.5 - 108MHz
Usable Sensitivity	: 6dB/ μV (S/N 30dB)
Stereo Separation	: 35 dB (at 1kHz)

MW Radio

Frequency Range	: 531 - 1,602kHz
Usable Sensitivity	: 28dB/ μV (S/N 20dB)

LW Radio

Frequency Range	: 153 - 279kHz
Usable Sensitivity	: 32dB/ μV (S/N 20dB)

Cassette Player

Reproduction System	: 4-track, 2-program stereo
Tape Speed	: 4.76cm/sec.
FF/Rewind Time	: Less than 110sec. (C-60)
Frequency Response	: 30 - 17,000Hz (Normal) 30 - 18,000Hz (Metal)
Wow and Flutter	: 0.12% (WRMS)
Signal to Noise Ratio	: 52dB (Dolby B NR on ; 62dB) < RD825/RD815 > 52dB < RD811/RD810 >

Dimensions**

Main unit	: 178(W) \times 50(H) \times 150(D) mm
-----------	--

Weight**

Main unit	: 1.6kg
-----------	---------

* Specifications and the design are subject to possible modification without notice due to improvements.

** Dimensions and Weight shown are approximate.

WARNING!

Lithium batteries. Explosion danger.
Change of batteries must only be done by qualified personnel and as described in the service manual.
Furthermore, that the batteries must only be changed with batteries of the same manufacture and type.

ADVARSEL!

Lithiumbatterier. Explosionsfare.
Udskiftning må kun foretages af en sagkyndig og som beskrevet i servicemanualen.
Batterierne kun må udskiftes med batterier af samme fabrikat og type.

Technische Daten*

Allgemeines

Spannungsversorgung	: 12V (11V - 16V) Gleichspannung, Testspannung 14.4V, negative Erdung
Klangregelung	: Bässe; $\pm 12\text{dB}$ bei 100Hz Höhen; $\pm 12\text{dB}$ bei 10kHz
Leistungsaufnahme	: Weniger als 2.5A (Cassettenwiedergabe, 0.5W, 4 Lautsprecher)
Höchstausgangsleistung	: 40W $\times 4$ (bei 4 Ω) < RD825 > 40W $\times 4$ (bei 4 Ω) < RD815/RD811/RD810 >
Ausgang	: 20W $\times 4$ (DIN45 324 bei 4 Ω) < RD825 > 20W $\times 4$ (DIN45 324 bei 4 Ω) < RD815/RD811/RD810 >

Lautsprecherimpedanz	: 4 - 8 Ω
----------------------	------------------

UKW-Stereo-Tunerteil

Frequenzbereich	: 87.5 - 108MHz
Anwendbare Empfindlichkeit	: 6dB/ μV (Signal /Rauschabstand 30dB)
Stereoabscheidung	: 35 dB (bei 1kHz)

MW-Tunerteil

Frequenzbereich	: 531 - 1,602kHz
Anwendbare Empfindlichkeit	: 28dB/ μV (Signal /Rauschabstand 20dB)

LW-Tunerteil

Frequenzbereich	: 153 - 279kHz
Anwendbare Empfindlichkeit	: 32dB/ μV (Signal /Rauschabstand 20dB)

Cassettenspieler

Wiedergabe-System	: 4 Spuren, 2-Kanal-Stereo
Bandgeschwindigkeit	: 4.76cm/sek.
Schnellvorlauf-/Rücklaufzeit	: Weniger als 110 sek. (C-60)
Frequenzgang	: 30 - 17,000Hz (Normale Bänder) 30 - 18,000Hz (Reineisenband)
Gleichlaufschwankungen	: 0.12% (WRMS)
Signal /Rauschabstand	: 52dB (Dolby B NR on ; 62dB) < RD825/RD815 > 52dB < RD811/RD810 >

Abmessungen**

Haupteinheit	: 178(B) \times 50(H) \times 150(T) mm
--------------	--

Gewicht**

Haupteinheit	: 1.6kg
--------------	---------

* Technische Daten und Ausführung können sich ändern ohne besondere Ankündigung bei gebührenden Verbesserungen.

** Abmessungen und Gewicht in angenäherten Werten angegeben.

WARNING!

Lithium-Batterien. Explosionsgefahr.
Die Batterien dürfen nur von qualifiziertem Personal und gemäß Beschreibung in der Wartungsanleitung ausgetauscht werden. Die Batterien dürfen nur durch Batterien des gleichen Herstellers und Typs ersetzt werden.


Precautions (ISO connector)

- Wiring for the power connector conforms to the arrangement of standard ISO connectors.
- In case of some car types, the arrangement of connector may differ from the standard ISO as shown in Table 1, even though ISO connectors are adopted.

Table 1

Fig. 1 Pin No.	A4	A7
Car for standard ISO	Battery (permanent 12 V supply)	"IGN" or "ACC" (switched 12 V supply)
In case of Car type A	"IGN" or "ACC" (switched 12 V supply)	Battery (permanent 12 V supply)
In case of Car type B	No Connection	Battery (permanent 12 V supply)

- Make sure the ISO connector arrangement in your car side is as same as the standard ISO. (Table 1, Fig. 1)
- In case of arrangement for Car type A or B, change connections of the red/yellow leads at the re-connectable joint (※) as shown in Fig.1.

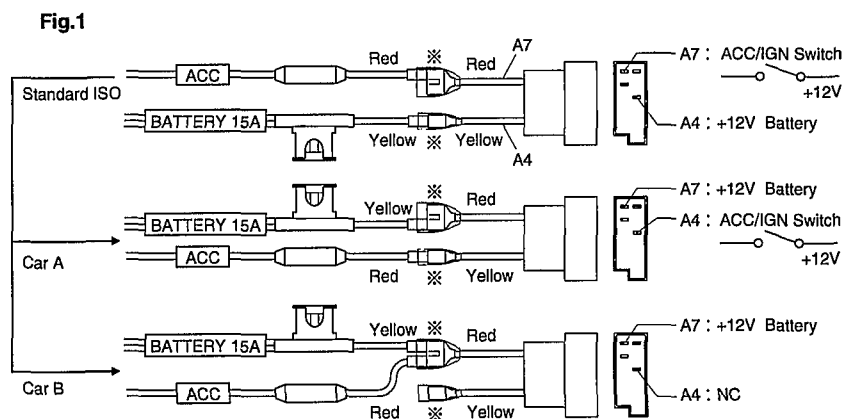

- After fix the connections, the part (※) should be insulated with electrical tape to keep away from unit damage.

ISO-Anschlußschema-Achtung:Sehr wichtig

- Die Verdrahtung des mitgelieferten Stromkabels entspricht der Anordnung der normalen ISO-Steckverbinder.
- Bei einigen Autotypen kann es vorkommen, daß die Verdrahtung anders als die aus der Tabelle 1 ersichtlichen ISO-Anordnung ist, obwohl ISO-Steckverbinder verwendet werden.

Tabelle 1

Abb. 1, Stift Nr.	A4	A7
Auto für normale ISO-Anordnung	Batterie (ständige 12V-Stromversorgung)	"IGN" oder "ACC" (umgeschaltete 12V-Stromversorgung)
Beispiel Auto A	"IGN" oder "ACC" (umgeschaltete 12V-Stromversorgung)	Batterie (ständige 12V-Stromversorgung)
Beispiel Auto B	Kein Anschluß	Batterie (ständige 12V-Stromversorgung)

- Die Daten überprüfen, um sicherzustellen, daß die Anordnung der ISO-Steckverbinder auf der Autoseite die gleiche ist wie die normale ISO-Anordnung (Tabelle 1, Abb. 1).
- Im Falle der Anordnung für Auto A oder B die Anschlüsse der rot/gelben Kabel am Übertragungs-Steckverbinderblock (※) gemäß Abb. 1 ändern.

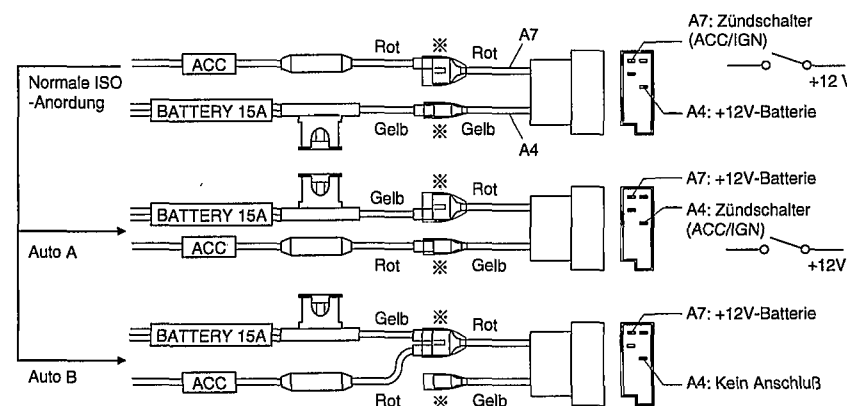


Abb. 1



- Nach der Verkabelung sollte unbedingt der durch ※ gekennzeichnete Teil mit Hilfe von Isolierbändern o.ä. isoliert werden.

Note:

This operating instruction manual is for seven models CQ-RD825LEN, CQ-RD825WLEN, CQ-RD815LEN, CQ-RD811LEN, CQ-RD810LEN, CQ-RD815GLEN and RD810GLEN. The differences between these models' are mentioned below. All illustrations throughout this manual represent model CQ-RD825LEN unless otherwise specified.

Operating Controls	MODEL	RD825LEN/ RD825WLEN	RD815LEN	RD810LEN	RD815GLEN	RD810GLEN	RD811LEN
AUX In		Yes	None	None	None	None	None
Sound Design Memory		Yes	None	None	None	None	None
Level Meter		Yes	None	None	None	None	None
Dolby NR System		B	B	None	B	None	None
CD Changer Control		Yes	Yes	None	Yes	None	Yes
Remote Control Unit		Yes	Option	Option	Option	Option	Option
Illumination Colors		Multi	Amber	Amber	Green	Green	Amber

Power and Sound Controls

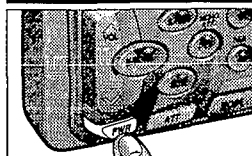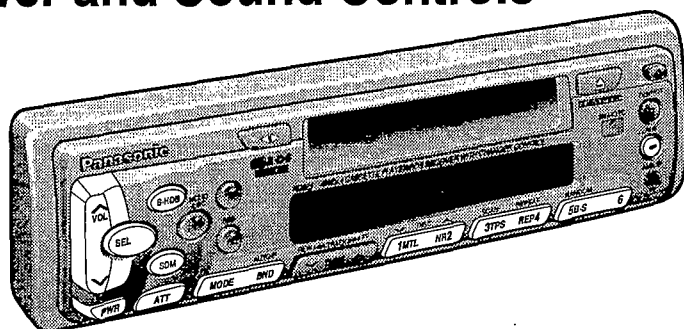

Power


If the car is not already running, turn the key in the ignition until the accessory indicator lights.

Press PWR to switch on the power.

Press and hold PWR again to switch off the power.

Note: When power is switched on for the first time, demonstration display appears. To release this display, press and hold PWR and switch power off.

* FM 1 87.50

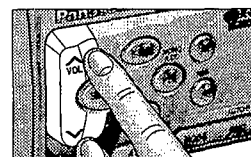

Volume

Press "VOL ^" or "VOL v" to increase or decrease volume.

VOL 40 — Volume Level
0 to 40

Press "VOL ^" or "VOL v" for more than a half second to sequentially change numeric levels on the display.




S-HDB (Super High Definition Bass)

Especially for rock music, the bass-sound will be more powerful.

• Press S-HDB to be able to listen to high-definition bass.

S-HDB

• Press S-HDB to return to the normal tone.

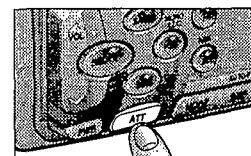

Attenuator

• Press ATT to decrease volume to about 1/10 of the previous level.

ATT

• Press ATT again to cancel.

Note: This unit is equipped with anti-volume-blast circuit which serves as an automatic volume level adjuster so that you will not be deafened with sudden loud volume. This system operates as below. When PWR is first pressed to switch on, the volume level is low. After that, the volume level gradually returns to the level when the switch is turned off. Anti-volume-blast circuit is not effective when volume level is lower than position 20 at the display.



Changing Audio Modes

Press SEL to switch the audio mode in the following order.

Normal Mode → VOL → BAS → TRE → BAL → FAD




Bass and Treble

Press SEL to select the BASS (TREBLE) mode. Press "VOL ^" or "VOL v" to increase or decrease the bass (treble) response.

BAS + 3dB —12 to +12

TRE + 3dB —12 to +12

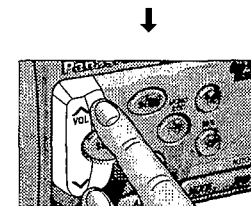

Balance

Press SEL to select the BALANCE mode. Press "VOL ^" or "VOL v" to shift the sound volume to the right or left speakers.

BAL L 2 1 to 15

BAL CNT Balance Center

BAL R 2 1 to 15


Power and Sound Controls continued

Fader

Press SEL to select the FADER mode. Press "VOL^" or "VOLV" to shift the sound volume to the front or rear speakers.



Note: When a Audio control mode (BAS/TRE/BAL/FAD) is selected but no operation is made within 5 seconds (2 seconds at VOL mode), the display will return to the normal operation (Radio, Tape, CD Changer (Only for RD825/RD815/RD811) or AUX (Only for RD825)) mode. In such a case, press SEL again to select the control mode.

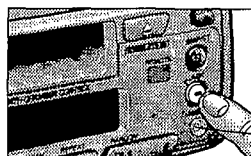

Selecting Auxiliary Source

<Only for CQ-RD825>

① Press AUX to select AUX Input mode.

AUX Jack




② Connect the auxiliary equipment (any other appropriate equipment) to the AUX Jack.

Canceling AUX Input mode

Press AUX or MODE to resume the previous mode.


Sound Design Memory (Only for CQ-RD825)

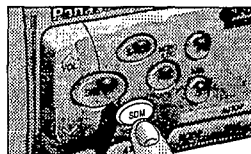

Sound Design Memory Mode Selection

A desired sound setting (except for VOL and ATT) can be memorized and recalled.

Press SDM to select the sound design memory mode.

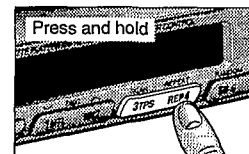


Sound Design Memory Input

• To preset a desired sound setting, press the corresponding preset memory button (1 to 4) for more than 2 seconds in sound design memory mode.



• The preset memory buttons 5 and 6 are not valid for memory write.

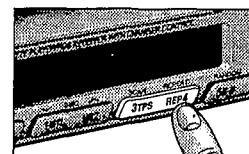


Sound Design Memory Call

• When a desired preset memory button is pressed in sound design memory mode, the corresponding sound setting is called out.



The called preset number is displayed.

- The preset memory button 5 is recommended for setting.
- The preset memory button 6 is used to release all sound settings.

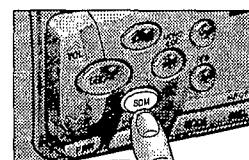

To change to normal mode

Press SDM to change to the normal mode.

Note: When the sound design memory mode is selected but no operation is made within 5 seconds, the mode will return to the normal mode.

Level Meter

<Only for CQ-RD825>

When power is ON, the level of sound sources, such as radio and tape, is displayed by the level meter shown below at all times.





L-ch sound source level

R-ch sound source level

Note: The level meter displays the level of a sound source and its indications do not change when VOL, BAL, or other control is turned.

Radio Basics

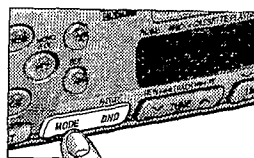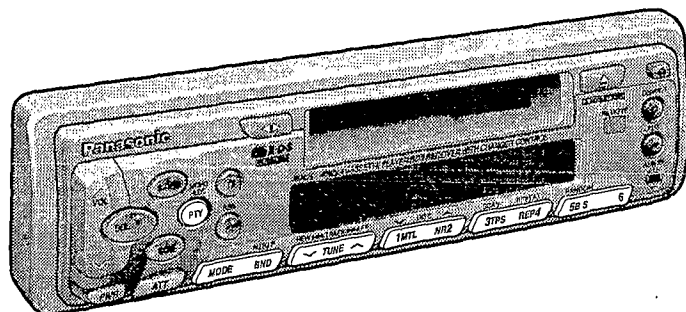

To change Tuner Mode


Press MODE to switch the operation mode in the following order.
① In case of local control

Tuner → Tape → CD Changer Control
(Only for RD825/RD815/RD811)

• Press AUX to select AUX Input mode.

② In case of remote control


Tuner → Tape → CD Changer Control
AUX

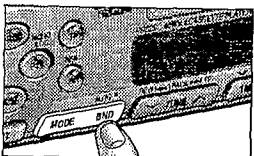

Selecting a Band

Press BND to select the bands in the following order.
"ST" indicator lights if the station is broadcasting in stereo.

FM1 → FM2 → FM3 → AM(LW/MW)

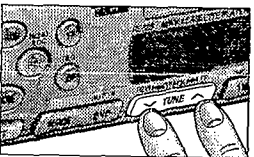


Manual Tuning

Press "V TUNE" or "TUNE ^" to move to a lower or higher frequency.

FM1 87.50

Press and hold "V TUNE" or "TUNE ^" to move to a lower or higher frequency rapidly.

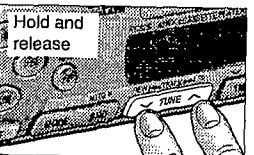




Seek Tuning

Press and hold "V TUNE" or "TUNE ^" for more than a half second, then release. The radio automatically stops on the next station.


Preset Station Setting

Up to 24 stations can be preset in the station memory as follows;



FM1	FM2	FM3	AM(LW/MW)
6 stations	6 stations	6 stations	6 stations

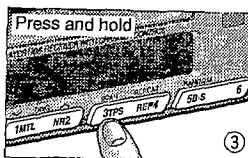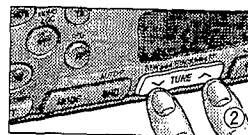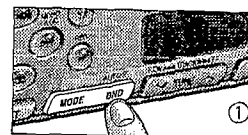

(Only for CQ-RD825)

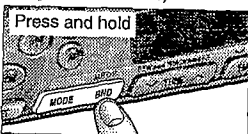

(Only for CQ-RD815/RD811/RD810)

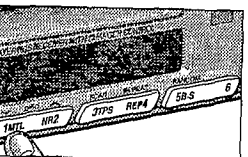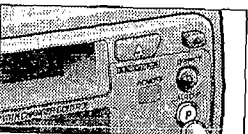

Manual Station Preset

- ① Press BND to select a desired band.
- ② Use manual or seek tuning to find a station that you want to program into memory.
- ③ Press and hold one of the station selector buttons 1 through 6 for more than 2 seconds until the display blinks. Repeat the process to set other stations for the FM1 to AM bands.

FM1 87.50

Preset Channel Indicator

Note: You can change the memory setting by repeating the above procedure.

Tuning in a Preset Station

Press any of the buttons 1 through 6 to tune in the station preset by the above steps ① to ③.

Auto Station Preset

Select a band and press and hold BND (AUTO · P) for more than 2 seconds. (Only for RD815/RD811/RD810 : Press P (AUTO-P))

- The six strongest available stations will be automatically set in memory on preset buttons 1 through 6.
- Once set, the preset stations are sequentially scanned for 5 seconds each.

- Press the appropriate preset button for the station you want to hear.


CAUTION: For safety reasons, do not attempt to program while driving.

Radio Basics continued

(Only for CQ-RD825)




(Only for CQ-RD815/RD811/RD810)

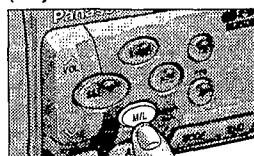

(Only for CQ-RD825)



(Only for CQ-RD815/RD811/RD810)

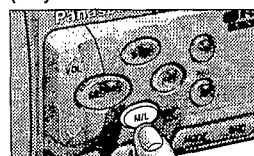

MONO/LOCAL Selection

- Much Interference is reduced during a weak FM stereo broadcasts. when MONO is ON (Only for FM mode)
- Searching stops automatically at a strong wave station only when LOCAL is ON.

Press PTY (MONO/LOC) (Only for RD815/RD811/RD810 : Each time press M/L (MONO/LOC)) to switch the mode in the following order.

① During FM broadcasts.

Press and hold PTY (MONO/LOC) (Only for RD815/RD811/RD810 : Each time press M/L (MONO/LOC)) to switch the mode in the following order. Release your finger at the desired mode.

MONO OFF → MONO ON → MONO ON → MONO OFF
LOCAL OFF → LOCAL OFF → LOCAL ON → LOCAL ON

② During AM broadcasts.

Press and hold PTY (MONO/LOC) (Only for RD815/RD811/RD810 : Each time press M/L (MONO/LOC)) to switch on or off the LOC mode as follows.

LOCAL OFF ↔ LOCAL ON

RDS (Radio Data System) Reception

Many FM stations are broadcasting added data compatible with RDS. This radio set offers convenient functions using such data.

AF (Alternative Frequency)

When receiving condition becomes poor, an RDS station with the same program will be automatically selected.

EON (Enhanced Other Networks)

When EON data is received, the EON indicator lights and the TA and AF functions are expanded.

TA: Traffic information from not only the station now tuned in to but also other stations of the same network can be received.

AF: The frequency list of the RDS stations preset by received EON data is updated.

PS (Program Service Name)

When an RDS station is received, the RDS indicator lights and automatically displays the name of that station instead of the frequency. When D (DISP) is pressed during PS display, the frequency is displayed for 3 seconds, then PS display returns.

PI (Program Identification)

If a preset RDS station is poor in receiving condition when it is selected, the automatic seek (PI Seek) starts to seek the same program and tune in to it.

PTY (Program TYPe)

Program type identification signal
Example : News, rock, classical music

TA (Traffic Announcement)

When an FM station that periodically provides the latest traffic information is received, the TP indicator lights. If TA ON is set, FM traffic information automatically interrupts your listening to a tape, CD changer, or AUX source until it ends, then you will listen again to whatever you have been listening to.

REG(Region)

The AF, Best Station Research, PI Seek functions will be as follows:

REG ON : The frequency changes only with the same regional program. This function is mainly used while driving in the same area, for example, in a city.

REG OFF: The frequency changes even with a different regional program if the station is in the same network. The broadcast may be different depending on the case. This function is mainly used when driving far from one region to another.



WHAT PROVIDES EON CAPABILITIES

EON lets the radio set take advantage of RDS information much more than before. It constantly updates the AF list of all presets, including the station currently tuned in to. So, even if you change preset far from home, you will be able to receive the same station at an alternative frequency, or another station serving the same program if any. EON also keeps track of locally available TP stations for quick reception.

Note: When you're in "AF ON" mode, auto preset memory only works for RDS station. When in "TA on" mode, it only works for TP stations. To make auto preset for ordinary stations, cancel AF mode and switch to TA off in advance.

RDS (Radio Data System) Reception continued

A. Basic Operation in RDS Reception (PS, AF, CT, PI)

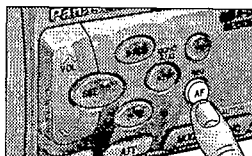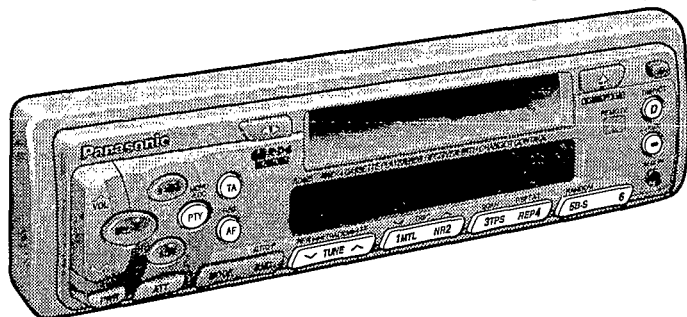

RDS Reception

Press AF when receiving a station in the FM1, FM2 or FM3 band.

- The operating mode changes to AF ON or AF OFF, respectively.



- Select AF ON if you wish to use the AF network of an RDS station. Best station research is activated at the same time.
- Select AF OFF if the AF network of an RDS station is not necessary.

Best Station Research

If a preset RDS station is in poor condition of reception when you try to tune in to it, the best frequency is selected from the AF list of that station.



To Change AF Mode


Press AF to change AF ON and activate Best Station Research at the same time. (3 seconds maximum)



Notes:

- Default mode is AF1.
- AF1 has a low level of AF operating sensitivity in urban areas. Therefore, AF does not frequently operate even if sensitivity is temporarily lowered between skyscrapers, for examples.
- AF2 is for suburban areas with a higher level of sensitivity than AF1.

For Seek Tuning, RDS Station Preset, Tuning in a RDS preset station, and Auto RDS Station Preset, please refer to Radio Basics (Page 22 to page 24).

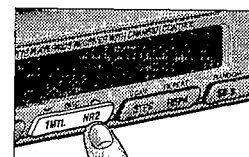

RDS seek tuning (PI seek)

The PI seek function may be used if an RDS station selected from the memory is poor in receiving condition. Press the preset button again for the station now tuned in to.



PI Seek: If Best Station Research fails in selecting the best station, the PI seek function operates to automatically tune in to the same program.



Region (REG) Switching

Press and hold AF(REG) for more than 2 seconds in AF mode to alternately select REG ON and REG OFF.





Note:

If you wish to stay with the same program, keep REG ON. If you keep REG OFF, there is a higher possibility of returning in to an AF station in better receiving condition.

The relationship of the PI seek function with REG ON and REG OFF is as described above.

Changing Display

- Press D(DISP) to change the display as follows. (Frequency display continues for only 3 seconds, returning to PS display after that.)

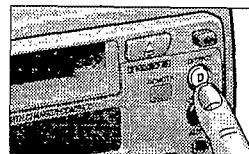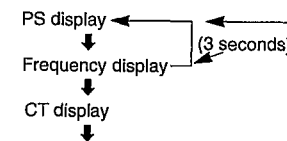


Clock Time (CT) System

The CT (24-hour) system may not properly operate in areas where RDS CT service is not available. Once CT service is received, the CT system keeps operating. "NO CT" is displayed in areas where no CT service is available.




Clock Display

Press D (DISP/CT) to indicate the clock display.

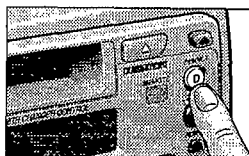

RDS (Radio Data System) Reception continued

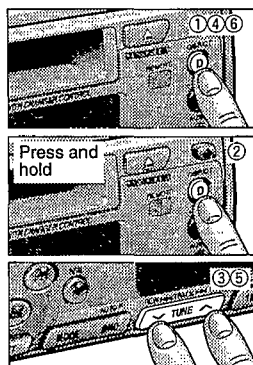

Initial Time Setting


Press BND to change to AM mode.

- ① Press D (DISP/CT) "NO CT" is displayed.
- ② Press and hold D (DISP/CT) again for more than 2 seconds "hours" blinks indicating the time setting mode is activated.
- ③ To set hours (24 hours), press "TUNE ^ or VTUNE".
- ④ Press D (DISP/CT) again for minutes setting.
- ⑤ To set minutes, press TUNE ^ or VTUNE.
Hold "^" or "V" change numbers rapidly.
- ⑥ When set the time, press D (DISP/CT).

Notes:

- If CT display is kept on, it remains on even if PWR and ACC are tuned off and back on again.
- In other mode, press and hold D (DISP/CT) for more than 2 seconds to get RDS CT-service.

B. TP Reception

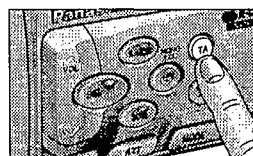

Select traffic information (TA on) mode

Press TA to switch ON and keep it there when you wish to listen to traffic information. Press TA to switch OFF when no traffic information is needed.



Volume Setting (Only for Tape/CD-C/AUX TA on mode)

Adjust the volume as desired using "VOL^" or "V VOL" while receiving traffic announcement. (TA)

After volume for traffic announcement (TA) is set, the difference between normal volume and TA volume is automatically stored in the memory (up to 5 levels) so that next traffic information will be received at the preceding TA volume which may be higher or lower than normal volume. Normal volume can be changed up to 5 levels upward or downward. If an adjusted level of volume is over 40 or less than 0, any further change will not be made.







When receiving a station other than TP station (including EON stations)

A traffic information station is automatically searched for and the radio automatically stops the next available TP station. EON Capabilities: EON lets the radio take advantage of much more RDS information than before. It constantly updates the AF lists for all switch presets far from home, you will receive an alternative frequency for the same station, or another station carrying the same program, when such exists. EON also keeps track of locally available TP station.



Press TA.

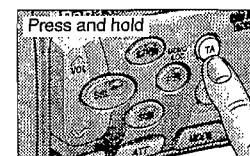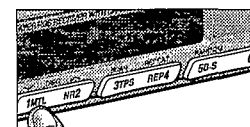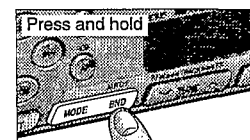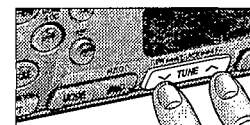

TP Seek Tuning

Press "V TUNE" or "TUNE ^" for more than a half second, then release. The radio automatically stops on the next available TP station.

 
Auto TP Station Preset

Press and hold BND (AUTO-P) for more than 2 seconds (Only for RD815/RD811/RD810 : Press P (AUTO-P)) until the display blinks in TA on. The six strongest available TP stations are automatically set in memory on the preset button 1 through 6.

Once set, the preset stations are sequentially scanned for 5 seconds each.

Tuning in a TP station preset

Press any of the preset buttons 1 through 6 that you want to hear. And then Best Station Research function is activated to automatically select the strongest available frequency for the TP station (through the built-in frequency) lists, if reception is weak.

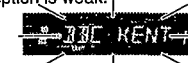

Muting TA on

Press and hold TA for more than 2 seconds to light "TA on". Then Traffic Announcement (TA) function is activated to operate, allowing you to listen to only Traffic Program whenever it is available.

Muting TA on canceling (Muting TA on → TA on)

Press TA again.

Press "VOL^" to increase the volume level.

 
TP Auto Search

If receiving conditions are poor when TA is on during muting and if there is no other alternative frequency in the same network, a traffic announcement station in good receiving condition is automatically searched for.

Tape/CD-C/AUX TA on

Press TA during tape, CD changer, AUX mode.

TA on mode is selected. while listening to the source in that mode, wait for Traffic Announcement to being.

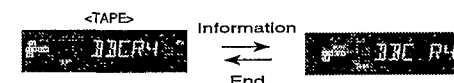

Switching to TA off Mode


Select either one of the following steps.

- Press TA when TA is ON.
- Press and hold TA for more than 2 seconds when Muting TA is ON.
- Press TA when tape/CD-C/AUX TA is ON.

RDS (Radio Data System) Reception continued

C. PTY Reception

(There are some areas where PTY service may not be available.)

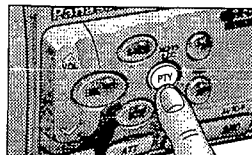


Switching to PTY mode

Press PTY to select PTY display mode, and the PTY of the broadcast now received is displayed.

CLASSICS

"NO PTY" is shown if there is no corresponding program type.

NO PTY

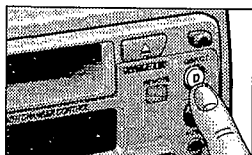

Changing PTY Display Language


Pressing D (DISP) each time in PTY mode to alternate the language between English and Swedish.
Press D (DISP).

NEWS

<English>

NYHETER

<Swedish>

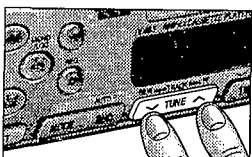

Program Type Selection

Press "V TUNE" or "TUNE ^" to select the program type in sequence as follows.

SPEECH - MUSIC - NEWS - AFFAIRS - INFO - SPORT - EDUCATE - DRAMA
ROCK M - POP M - VARIED - SCIENCE - CULTURES
M.O.R.M - LIGHT M - CLASSICS - OTHER M - WEATHER - FINANCE
LEISURE - TRAVEL - PHONE IN - RELIGION - SOCIAL A - CHILDREN
JAZZ - COUNTRY - NATIONAL - OLDIES - FOLK M - DOCUMENT

When the desired selection has been made, press BND. Then automatic seek will start to tune into the station broadcasting the selected program type.

Note :

Seek tuning does not operate as long as "NO PTY" is displayed.


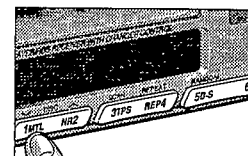


TABLE of PTY CODE and program Type

Press any of the preset button 1 through 6 that you want to desire the program type. Those buttons are already stored program types as below. (Initial setting)


<PRESET PTY>

Preset NO.	1	2	3	4	5	6
Program Type	NEWS	SPEECH	SPORTS	POP. MUSIC	CLASSICS	MUSIC
Display	NEWS 1	SPEECH 2	SPORT 3	POP M 4	CLASSICS 5	MUSIC 6
	NEWS	AFFAIRS INFO EDUCATE DRAMA CULTURES SCIENCE VARIED WEATHER FINANCE CHILDREN SOCIAL A RELIGION PHONE IN TRAVEL LEISURE DOCUMENT	SPORTS	POP M	CLASSICS	ROCK M M.O.R.M LIGHT M OTHER M JAZZ COUNTRY NATIONAL OLDIES FOLK M

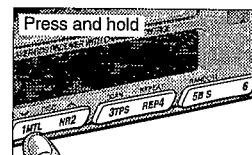

Program Type Preset

Press and hold one of the buttons 1 through 6 for more than 2 seconds to preset the desired program type selection in that button.

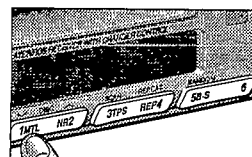


Tuning in a PTY Preset Station


Press any of the preset buttons 1 through 6 that you want to hear.

RDS (Radio Data System) Reception continued

Searching for PTY

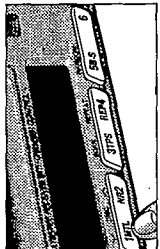

 ① Select the desired station from among those preset in the preset number buttons 1 through 6. Then, the preset PTY and that preset number are displayed for 5 seconds.

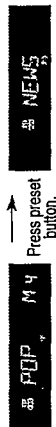


② While the desired type from 6 presets is displayed, take either of the following two steps.
A) Press the same preset button again.
B) Press BND.

If the desired PTY station is available, it is directly received. If it is not, "NO PTY" blinks and the radio returns to the station that was received before the search.



Press the same button again to cancel.

Canceling of PTY Mode

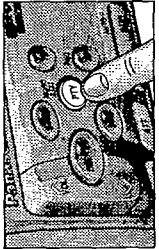


Press PTY to cancel.
The set returns to the state existing before PTY mode while the receiving frequency remains unchanged.

Emergency Announcement Reception


(Some areas are not covered by emergency announcement service.)
If an emergency announcement is broadcast during tape/CD changer/AUX mode, the radio is automatically selected to receive the emergency announcement. "ALARM" blinks.

Cassette Tape Player Basics

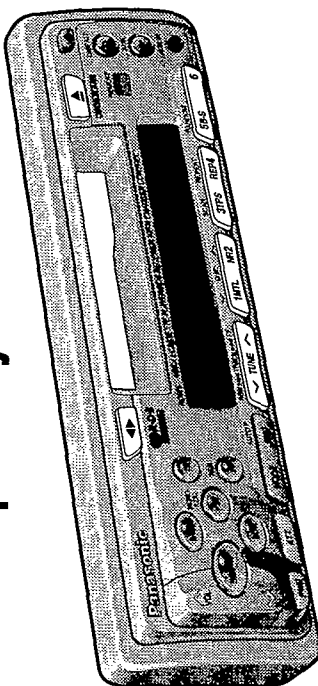

Loading a Cassette

Insert the cassette with the exposed tape side facing to the right. Gently push the cassette in until the mechanism captures it. Then the cassette is loaded in place and playback starts.


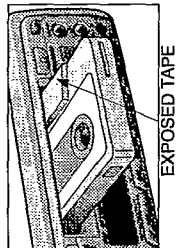


Rewind and Fast Forward

Press either REW to rewind or FF to fast forward the tape.



- If you rewind the tape fully, it will play same program side again.
- If you fast forward to the end, play will resume from the beginning of other side of the tape.

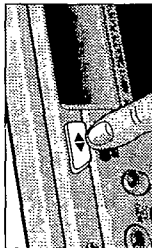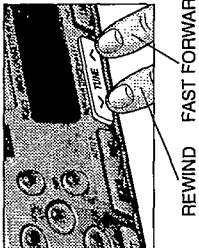

To stop rewind or fast forward, press ◀▶.

Changing Sides

Press ◀▶ to switch to the program on the other side of the tape.




TOP SIDE PLAYING



BOTTOM SIDE PLAYING

Cassette Tape Player Basics continued

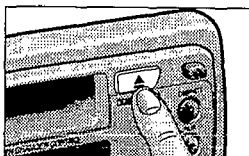


Ejecting the Tape

Press Δ . The cassette will eject for removal, and the previous mode of operation will be resumed.

Notes:

- If power is switched off before Δ is pressed, the cassette will not eject. Switch on the power again and press Δ to eject the cassette.
- The cassette tape should always be removed from the cassette slot when not in use.

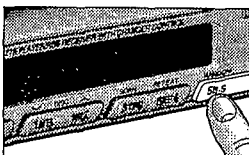

Blank Skip


Press 5 (B · S) to skip long unrecorded portions on the tape.



Press 5 (B · S) again to cancel.

Notes:

- "B · SKIP" indicator lights. However, the blank skip operation will not work if REP is on. The repeat function has priority over that of the blank skip function.
- Also the blank skip operation will not work when the unrecorded portions of the tape is less than 15 seconds.

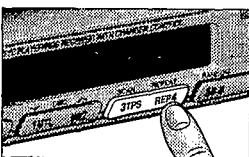


Repeat Play

- Press 4 (REP) to repeat the same music you are now listening to.



- Press 4 (REP) again to cancel.

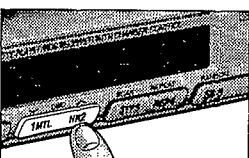


Dolby Noise Reduction

<Only for CQ-RD825/RD815>

- Press 2 (NR) to set the Dolby B NR mode.



- Press 2 (NR) again to cancel.
- Set the Dolby B NR mode when playing back a tape recorded with Dolby B Noise Reduction.

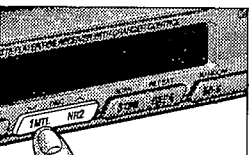


Metal Tape Mode

- Press 1 (MTL) when playing metal or chromium dioxide (CrO₂) tapes.



- Press 1 (MTL) again to cancel.

Note: Playing non-metal tapes in MTL mode causes high frequency imbalance, which affects tone quality.

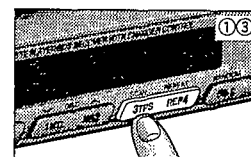


TPS Operation (Tape Program Search)

- Press 3 (TPS) to activate the tape program search mode



 
- From the current selection, decide which program you want to select. Now, press "TUNE Δ (FF)" several times forward (up to 9 programs) or press "VTUNE(REW)" several times backward (up to 8) to select the corresponding program number.

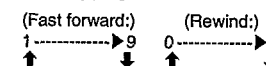

- EX1. To select the current program again press 3 (TPS), and press "VTUNE" once.



 - EX2. To select the 1st program backward of the current selection, press 3 (TPS) once, and press "VTUNE" two times.

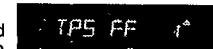

- EX3. To select the next program, press 3 (TPS) and press "TUNE Δ " once.



- EX4. To select the 3rd program forward of the current selection, press 3 (TPS) once, and press "TUNE Δ " three times.

- Press 3 (TPS) again to cancel.

Note:

The TPS mode may not work correctly in the following cases. This, however, does not mean that the unit is defective.

- There is an interval less than 4 seconds or having a high level of noise or hum between programs.
- There is particularly low-level passage during the program.



Note: To maintain your cassette player in top condition, avoid using tapes that are longer than 90 minutes (C-90).

CD Changer Basics

<Only for CQ-RD825/RD815/RD811>

Note:


CD changer functions are applicable to units with optional CD changer unit. (sold separately)

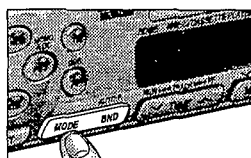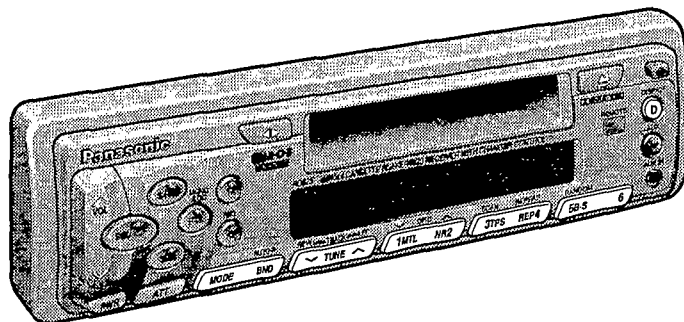

To start the CD Changer

While CD changer is connected, press MODE to change into the CD changer mode and playback starts automatically.

CD 3-01

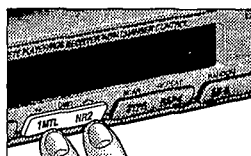


Selecting a Disc

Press "V DISC" or "DISC ^" to select discs in descending or ascending order.




CD 3-01

Then, the selected disc will start to play from the first track.

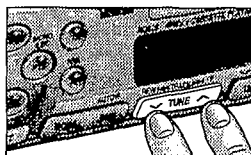

Selecting a Track

- Press "TRACK >>>" once to go to the next track.
- Press "<<< TRACK" once to play from the beginning of the current track. Press twice to play the previous track.
- Press repeatedly to skip the desired number of tracks.

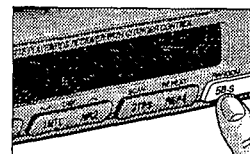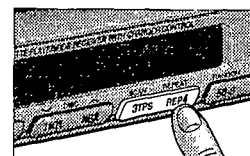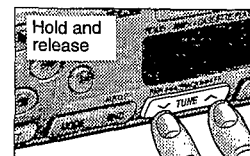

Searching a Track

- Press and hold "TRACK >>>" or "<<< TRACK" for more than a half second to activate fast forward or reverse through a track.
- Release "TRACK >>>" or "<<< TRACK" to resume the normal CD play.

Repeating a Track

- Press 4 (REPEAT) to repeat the current selection.

CD 3-01

- Press 4 (REPEAT) again to cancel

Random Selection




- Press 5 (RANDOM). A random selection of music is played from all available CDs.

CD 3-01

- Press 5 (RANDOM) again to cancel.

Note:

The "V DISC" or "DISC ^" is operated, has priority over that of Random play mode. The Random mode will stop and the disc select function will operate once the "V DISC" or "DISC ^" is pressed.

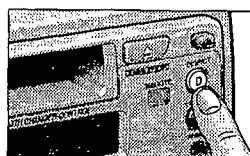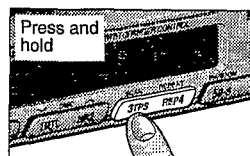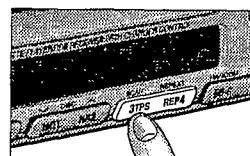

Scanning Tracks


- Press 3 (SCAN). The display blinks and the first 10 seconds of each track on the discs play in sequence.
- Press 3 (SCAN) again to cancel.

Scanning Discs

- Press and hold 3 (SCAN) for more than 2 seconds. The 1st track of all the discs in the magazine is played for 10 seconds each.
- Press and hold 3 (SCAN) again for more than 2 seconds to cancel.



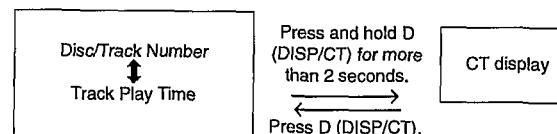

Changing the Display

Press D (DISP/CT) to switch the display in sequence as follows.



CD Changer Basics continued


Error Display Messages

	Displays when the compact disc is dirty or upside down. Selects the next available compact disc.
	Displays when compact disc is scratched. Selects next available compact disc.
	Displays when the unit stops operating for some reason. Press RESET on the CD Changer (optional).
	Displays when there is no disc in the magazine.

Remote Control Basics

Battery Replacement:

- 1. Remove the battery holder.**
Pull the holder by the Position B while pushing Position A in the direction indicated by the arrow.
- 2. Replace the battery.**
Set a new battery properly with (+)side up as illustrated.
- 3. Insert the battery holder.**
Push in the holder to the original position.

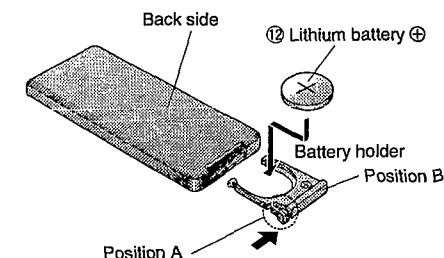

Note on Batteries:

Old batteries must immediately be removed and disposed.

Battery Information:

- Designated Battery: Panasonic Lithium Battery (CR2025)
- Battery Life: 6 months with normal use (in normal room temperature)

Caution:

Improper use of batteries may cause overheating, explosion or ignition, resulting in injury or fire. Battery leakage may cause damage to the unit.

- Do not disassemble or short the batteries. Do not throw the batteries into the fire.
- To avoid the risk of accident, keep the batteries out of reach of children.

Names of Main Controls :


<Only for CQ-RD825 (Supplied)>

<Only for CQ-RD815/RD811/RD810 (Option)>

Power Button
(Refer to page 4.)

Mode Button
(Refer to page 5,6,13.)

Volume Control Button
(Refer to page 4.)

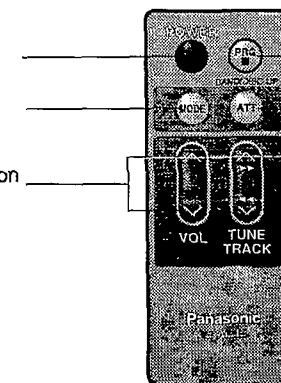

Band/Disc up, Program, STOP Button
(Refer to page 5,6,13.)


ATT Button
(Refer to page 4.)

TUNE/TRACK, Rewind/Fast Forward Button
(Refer to page 5,6,13.)

Anti-Theft System

This unit is equipped with a removable face plate. By removing this face plate, the radio becomes totally inoperable. The security indicator will blink.

To Remove the Removable Face Plate

- ① Switch off the power.
- ② Press the release button (). The removable face plate will be released.

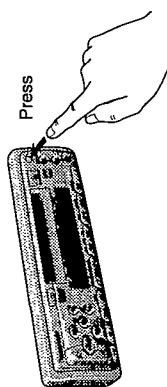


Fig. 1

- ③ Remove the removable face plate by pulling on the right side of the unit. Place the removable face plate in a supplied case.

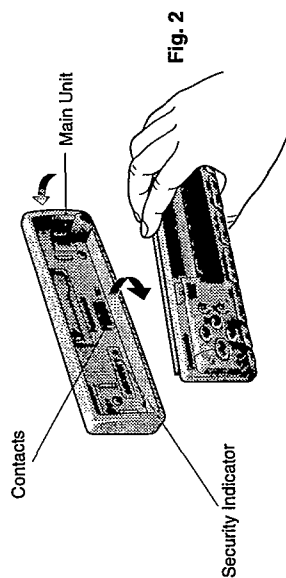


Fig. 2

- ④ As shown in Fig.3, insert the removable face plate with the arrow pointing toward the removable face plate case until you hear a "click". Keep the removable face plate in the case. Then, you can bring the plate safely.

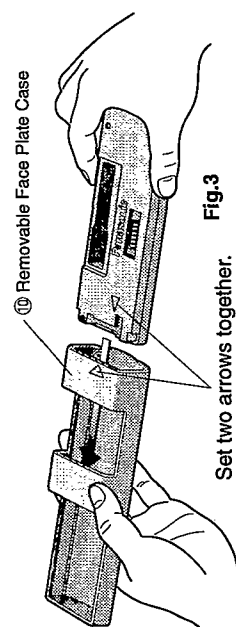


Fig.3

Set two arrows together.

To install the Removable Face Plate

- ① Slide the left side of the removable face plate in place.

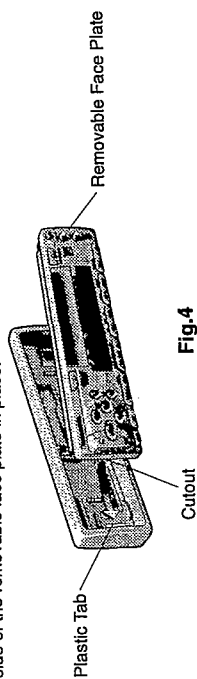


Fig.4

- ② Press the right end of removable face plate until "click" is heard.

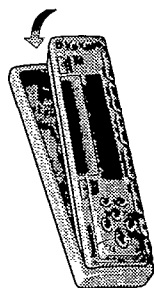


Fig.5

Caution:

1. Before removing the removable face plate, make sure the power is off.
2. This removable face plate is not water-proof. Do not expose it to water or excessive moisture.
3. Do not remove the removable face plate, while driving your car.
4. Do not place the removable face plate on the dashboard or nearby areas where the temperature rises to high levels.
5. Do not touch the contacts on the removable face plate or on the main unit, since this may result in poor electrical contacts.
6. If dirt or other foreign substances get on the contacts, wipe them with a clean, dry cloth.

Anti-Theft System continued

Warning Alarm/Horn Alert

Caution

This car radio is equipped with an integrated Warning Alarm & Horn Alert in order to make robbery more difficult.

But it has to be secured that the installation will be properly done so that the Warning Alarm & Horn Alert may work in a perfect way. Concerning the installation the following points have to be observed:

1. The supplied mounting collar has to be firmly fixed with the mounting tabs to the dash-board.
2. The radio has to be put into the mounting collar in that way that it exactly ends with the collar.
3. Please make sure that the technical features (impedance and power) of the speakers installed correspond to the specifications of this car radio (see technical specifications).

Only when these three points are observed during the installation, the correct function of the "Warning Alarm"/"Horn Alert" will be secured.

If the main unit is not correctly wired and installed, the system may accidentally sound the alarm.

Warning Alarm, Horn Alert and Security Indicator

The security indicator blinks when the removable face plate is removed from the unit. Furthermore, the alarm will set off for 1 minute then reset when an attempt is made to remove the unit from the mounting collar.

Activate Warning Alarm, Horn Alert and Security Indicator

1. Press and hold SEL for more than 4 seconds when the power is ON. "ALARM ON" is displayed, and the security indicator and Warning Alarm turn ON.

Note: The ALARM mode is inactivated when it is shipped.

2. To check whether the unit is set in the ALARM ON mode, make sure that the security indicator blinks when the removable face plate is removed.

Display	Security Indicator	Warning Alarm	Horn Alert	Panel Removal Alarm
ALARM ON	Blinks	ON	ON	ON
(Press and hold SEL for more than 4 seconds.)				
ALARM OFF	OFF	OFF	OFF	OFF

Caution:

1. Warning Alarm and Horn Alert system may not operate if the exclusive supplied mounting collar is not used. This mounting collar will set off the alarm when the unit is being removed.
If the main unit is not correctly wired and installed, the system may accidentally sound the alarm.
2. When removing or installing the unit, make sure that it is in the ALARM OFF mode.
3. When the Warning Alarm is activated by mistake, or when you want to remove the unit, the Warning Alarm and the security indicator functions can be canceled by the following steps of procedure.
 - Install the removable face plate.
 - Disconnect the power connector.

Panel Removal Alarm

This alarm sounds to warn you not to forget to remove the panel before leaving your car. This function is activated when the security alarm is ON.

Installation

Preparation

- Before installation check the radio operation with antenna and speakers.
- Disconnect the cable from the negative (-) battery terminal (see caution below).

Caution:

For installation to cars with trip or navigational computers, all electronic memory settings previously registered in the computer will be lost when the battery terminal is disconnected. For this type of car, battery could not be disconnected. Therefore, extra care should be taken to prevent short circuiting.

In-dash Installation

Installation Opening

In-dash installation can be done if the car's dashboard has an opening for this unit as shown in Fig. 1. The car's dashboard should have a thickness of 4.5mm - 6mm in order to make the installation of the unit.

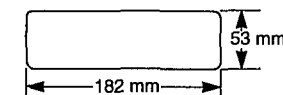 


Fig. 1

Installation Precautions

This equipment, if possible, should be installed by a professional installer.

In case of difficulty, please consult your nearest authorized Panasonic Service Center.

1. This system is to be used only in a 12-volt, DC battery system (car) with negative ground.
2. Follow the electrical connection on pages 18 carefully. Failure to do so may result in damage to the unit.
3. Connect the power lead after other connections are made.
4. Be sure to connect the YELLOW lead to the positive terminal (+) of the battery or fuse block (BAT) terminal.
5. Insulate all exposed wires to prevent short circuiting.
6. Secure all loose wires after installing the unit.
7. Please carefully read the operating and installation instructions of the respective equipment before connecting it to this unit.

Supplied Hardwares

No.	Item	Diagram	Q'ty
①	Mounting Collar		1
②	Plain Washer (5 mmφ)		2
③	Spring Washer (5 mmφ)		2
④	Hex. Nut (5 mmφ)		2
⑤	Rear Support Strap		1
⑥	Hex. Bolt (5 mmφ x 25 mm)		1


No.	Item	Diagram	Q'ty
⑦	Toothed Lock Washer (5 mmφ)		1
⑧	Mounting Bolt (5 mmφ)		1
⑨	Power Connector		1
⑩	Removable Face Plate Case		1
⑪	Remote Control Unit (Only for RD825)		1
⑫	Lithium Battery (Only for RD825)		1
⑬	Dismounting Plate		1

Installation continued

Installation Procedures


1. Secure the Mounting Collar ①.

Insert Mounting Collar ① into the car's dashboard, and bend mounting tabs out with a screwdriver.

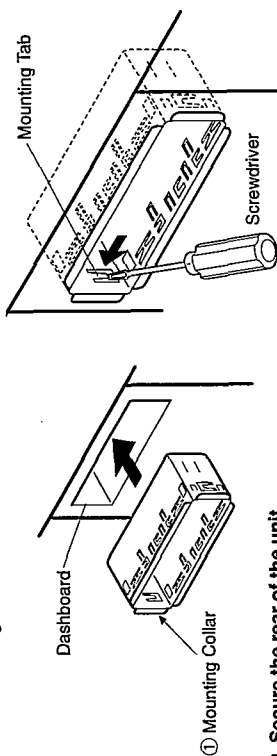

2. Secure the rear of the unit.

- Check the electrical connection by referring to this operating instructions.
- Connect the Mounting Bolt ⑥, using a suitable wrench.
- Insert the unit into Mounting Collar ① and push it in until "click" is heard.

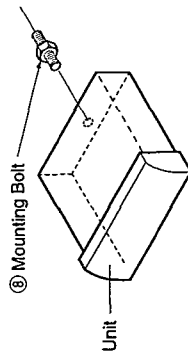


d) Secure the rear of the unit to the car by either of the two recommended methods.

■ Using the Rear Support Strap ⑤

Affix one end of the Rear Support Strap ⑤ to the rear of the unit, and the other end to the Fire Wall of Car, or some other metallic area.


■ Using the Rubber Cushion (Optional)

(If there is an existing Rear Support Bracket on the Fire Wall of Car.)
Cover Mounting Bolt ⑧ on the rear of the unit with Rubber Cushion (Optional), and mount it into the existing Rear Support Bracket.

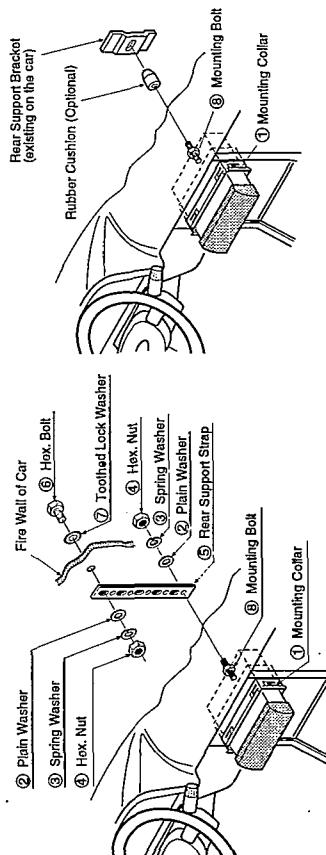

3. Plug the Power Connector ⑨.


4. After installation reconnect the negative (-) battery terminal.

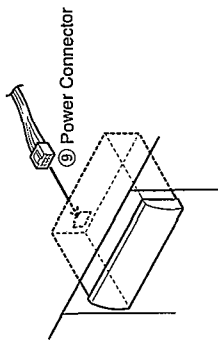

To remove the trim plate (for Japanese Cars)


You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your dealer.

To mount this unit on a Japanese car, first cut the 9 slits in back of the trim plate with side-cut pliers, remove the trim plate, then mount this unit.

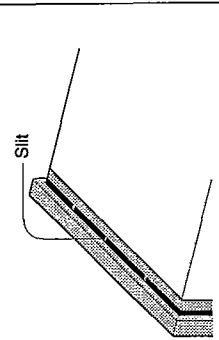

To Remove the Unit

- Remove the removable face plate. (See page 40.)
- Pull out the unit while pushing the lock lever using Dismounting Plate ⑬.
- Remove the unit pulling with both hands.

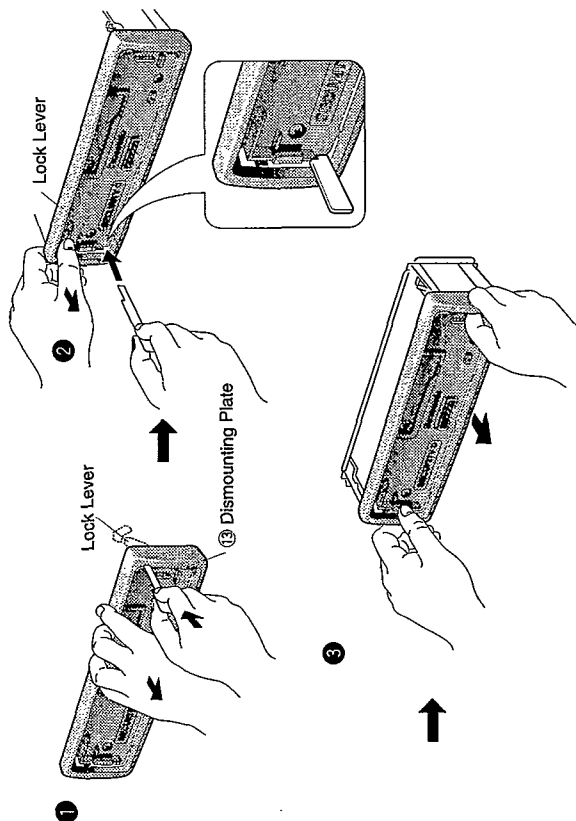


Note: Do not lose the Dismounting Plate. It will be needed to remove the unit from the car's dashboard.

<CQ-RD825/RD815/RD811>

- Confirm the note on page 4, and make connections to the connectors on car side.

- Confirm the note on page 4, and make connections to the connectors on car side.
- To prevent damage to the unit, be sure to follow the connection diagram below.
- Remove the covering of the leads about 5 mm long from their end before connecting. (the cords except for ISO connector's cords)
- Do not insert the power connector into the unit until the wiring is completed.
- Be sure to insulate any exposed wires from a possible short-circuit from the car chassis. Bundle all cables and keep cable terminals free from touching any metal parts.

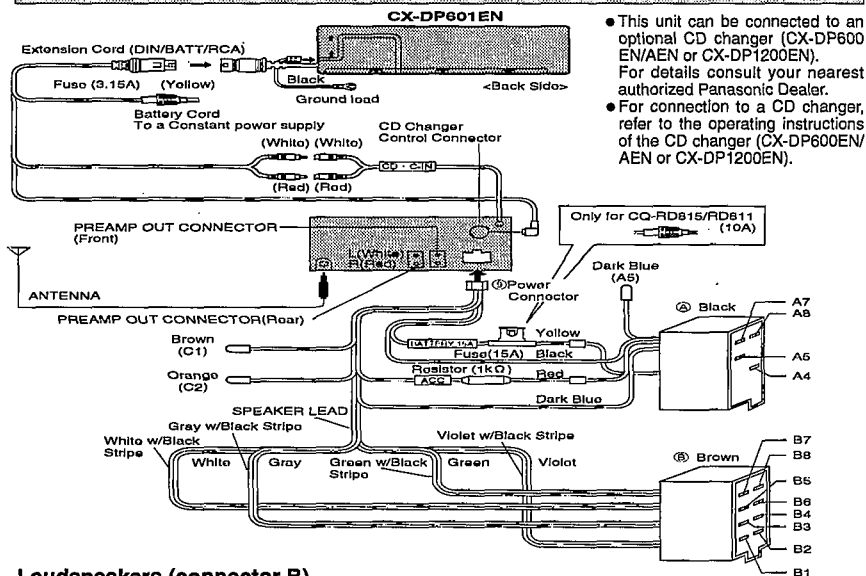

Loudspeakers (connector B)

	Left +	Left –	Right +	Right –
Front	B5 (White)	B6 (White w/Black Stripe)	B3 (Gray)	B4 (Gray w/Black Stripe)
Rear	B7 (Green)	B8 (Green w/Black Stripe)	B1 (Violet)	B2 (Violet w/Black Stripe)

A4

BATTERY LEAD (To Battery of Car) (Yellow)
Connect to the "BAT" terminal on the fuse block of the car.
The power should be supplied continuously to the yellow leads regardless of the on/off position of the Ignition key.

A5

MOTOR ANTENNA RELAY CONTROL LEAD (Dark Blue)
(To Motor Antenna) (Max. 500mA)
This lead is not intended for use with switch actuated power antenna.

AMP-RELAY CONTROL POWER LEAD
This lead is for connection to Panasonic power amplifier.

A7

POWER LEAD (Red)
Connect to the "radio" power line of the car or to the "IGN" or "ACC" terminal of the fuse block.

A8

GROUND LEAD (Black)
Connect to a well grounded metallic part of your car.

C1


Horn Alert CONTROL LEAD (Brown)
(To Horn Alert UNIT) (CA-HAL1EN)(Except for RD811LEN)

C2

TELEPHONE MUTE LEAD (Orange)
(To car telephone mute line)
TELEPHONE MUTE
The telephone mute lead, if connected to the car telephone mute line, will activate the muting circuit and the sound from the speakers cannot be heard while the telephone conversation is in progress.
Note: This telephone mute lead is for connection only to the radio mute line. Be sure to ascertain this because it will not work with other type of output system.

Caution:

- Confirm the note on page 4, and make connections to the connectors on car side.
- To prevent damage to the unit, be sure to follow the connection diagram below.
- Remove the covering of the leads about 5 mm long from their end before connecting. (the cords except for ISO connector's cords)
- Do not insert the power connector into the unit until the wiring is completed.
- Be sure to insulate any exposed wires from a possible short-circuit from the car chassis. Bundle all cables and keep cable terminals free from touching any metal parts.

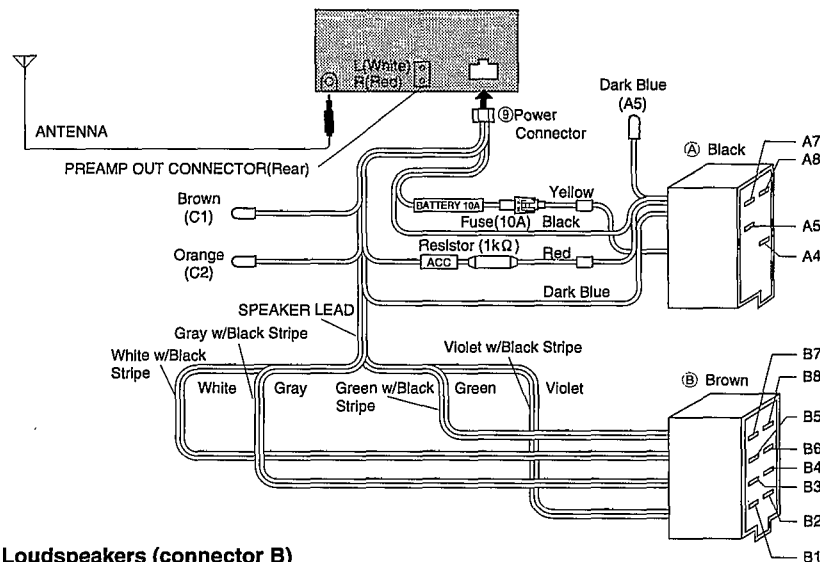

Loudspeakers (connector B)

	Left +	Left -	Right +	Right -
Front	B5 (White)	B6 (White w/Black Stripe)	B3 (Gray)	B4 (Gray w/Black Stripe)
Rear	B7 (Green)	B8 (Green w/Black Stripe)	B1 (Violet)	B2 (Violet w/Black Stripe)

A4

BATTERY LEAD (To Battery of Car) (Yellow)
Connect to the "BAT" terminal on the fuse block of the car.
The power should be supplied continuously to the yellow leads regardless of the on/off position of the ignition key.

A5

MOTOR ANTENNA RELAY CONTROL LEAD (Dark Blue)
(To Motor Antenna) (Max. 500mA)
This lead is not intended for use with switch actuated power antenna

AMP-RELAY CONTROL POWER LEAD
This lead is for connection to Panasonic power amplifier.

A7

POWER LEAD (Red)
Connect to the "radio" power line of the car or to the "IGN" or "ACC" terminal of the fuse block.

A8

GROUND LEAD (Black)
Connect to a well grounded metallic part of your car.

C1

Horn Alert CONTROL LEAD (Brown)
(To Horn Alert UNIT) (CA-HAL1EN)

C2


TELEPHONE MUTE LEAD (Orange)
(To car telephone mute line)
TELEPHONE MUTE
The telephone mute lead, if connected to the car telephone mute line, will activate the muting circuit and the sound from the speakers cannot be heard while the telephone conversation is in progress.
Note: This telephone mute lead is for connection only to the radio mute line. Be sure to ascertain this because it will not work with other type of output system.

Speaker Connections

CAUTION:

1. Use ungrounded speakers only.
2. The speakers to be used with this unit should be able to handle more than 40W (RD825), 35W (RD815/RD811/RD810) of audio power. If an optional amplifier is used, the speakers should be able to handle the maximum output power of the amplifier. Use of speakers with small input ratings can cause damage to the speakers.
3. The speaker impedance should be 4 - 8 ohms. If the impedance is too large or too small, it affects the output and may cause damage to the speakers or this unit.
4. Do not use 3-wire type speaker system having a common earth lead. Never connect the speaker cord to the body of the car. This unit uses the BTCL circuit, so each speaker should be connected separately using parallel vinyl insulated cords.
5. The speaker cords and the power amplifier unit should be kept away (about 30cm apart) from the antenna and antenna extension cord.
6. Follow the connection diagram below carefully. Failure to do so may cause damage to both unit and speakers.

- Unit will be damaged if speakers (Front, Rear) are not connected properly.

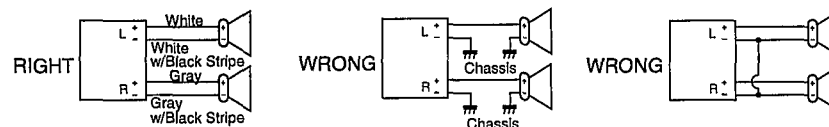

- Do not connect more than one speaker to one set of speaker leads.

