


**INTERFACE BOARD TYPE 850  
B327  
PARTS LOCATION AND LIST**



This section instructs you as to the numbers and names of parts on this machine.

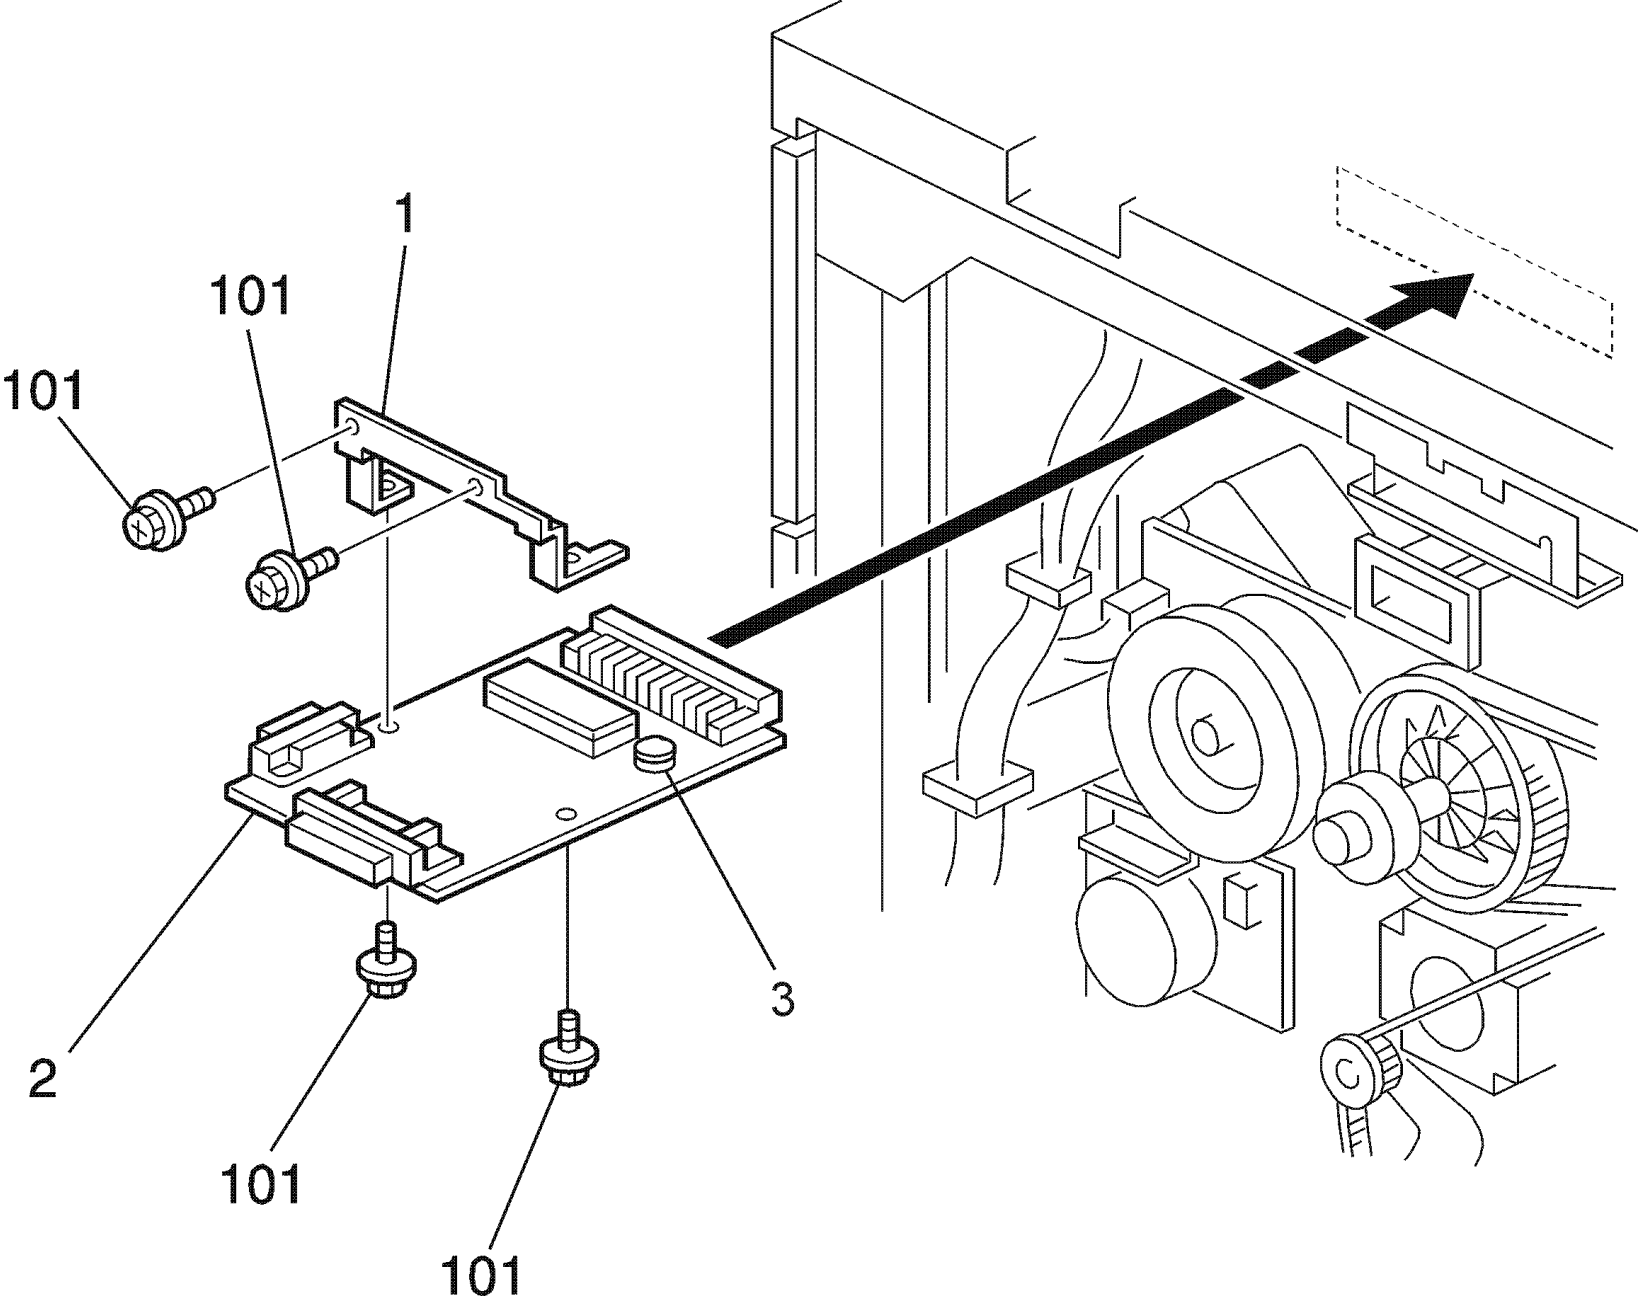

## 1.INTERFACE BOARD (327)

Rev. 12/05/2000

Index No.	Part No.	Description	Q'ty Per Assembly
1	B327 1051	Interface Board Bracket	1
2	B327 5120	NTTR Board	1
3	1107 0719	Fuse - K1937/1A	1

Index No.	Part No.	Description	Q'ty Per Assembly
101	0951 3006B	Polished Round Screw - M3X6	



**INTERFACE BOARD TYPE 850  
B327  
PARTS INDEX**





This section instructs you as to the numbers and names of parts on this machine.

Part No.	Description	Page and Index No.
B327 1051	Interface Board Bracket	3- 1
B327 5120	NTTR Board	3- 2

Part No.	Description	Page and Index No
0951 3006B	Polished Round Screw - M3X6	3-101