

Service
Service
Service



Philips Domestic Appliances and Personal Care

Service Manual

PRODUCT INFORMATION

Features

- Color : Lilac
- Careeza soleplate
- Steam output (40 gram/min)
- Shot Of Steam, SOS (95 gram/min)
- Vertical SOS
- Spray feature
- Tank capacity (350 ml)
- Cord winder
- Cord length (2.4 m)
- Drip stop feature
- Anti-calc feature
- Self clean feature

Safety Information

- This product meets the requirements regarding interference suppression on radio and TV.
- After the product has been repaired, it should function properly and has to meet the safety requirements and legal regulations as officially laid down at this moment.

TECHNICAL INFORMATION

Voltage	: 220 - 240 V
Frequency	: 50 - 60 Hz
Power	: 2000 - 2400 W
Dimension (F-box)	: 328 (L) x 129 (W) x 163 (H) mm
Weight	: 1.47 kg

Water Advice

Suitable for tap water use. Advice to mix with equal portion of distilled water or use only distilled water if the tap water is very hard.

Self Clean

When the self clean button is pressed, a sudden release of water into the soleplate loosen scale particles by thermal shock. These particles are then flushed out through the steam vents by the water.

Careeza Soleplate

Careeza is a multi-layer chemical substance that gives an excellent gliding effect and better care for the garment.

Vertical Steam


When the iron is kept in a vertical position, the SOS button can be used to iron hanging fabrics such as curtains.

Anti Drip

Water is only released into steam chamber via the tank valve when the soleplate temperature is high enough. If the temperature is too low, the tank valve is closed by means of a bi-metal disc.

DIAL 1

RATTLE SPRING 2

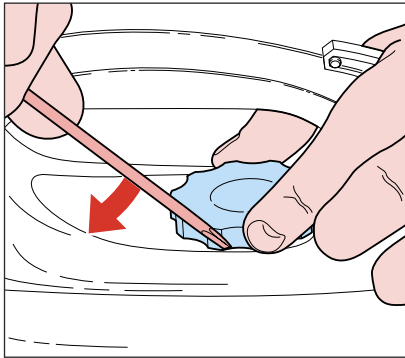


BACKPLATE 3

BACKPLATE COVER 26

CORDSET 4

BALL SWIVEL 5

- Remove Screw A
- Remove Screws B1, B2

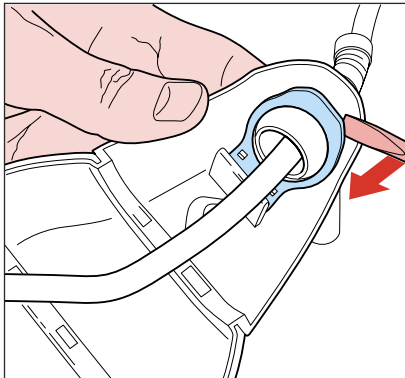


FILLING DOOR 6

INLAY 7

OPERATION KNOBS 8

LAMP 9

- Remove Screw A
- Remove Backplate 3, 26

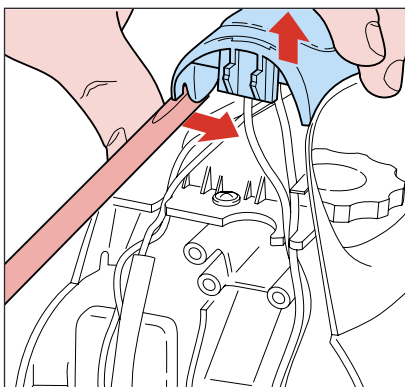

SLIDE UNIT 10

NEEDLE SET 11

TANK SEAL 12

HANDLE 13

SELF CLEAN BUTTONS 14

SPRAY NOZZLE ASSY 15

PUMP ASSY 16

- Remove Screw A
- Remove Backplate 3, 26
- Remove Inlay 7
- Remove Operation knobs 101, 102
- Remove Screws C1, C2
- Remove Slide Unit 103, 104
- Remove Needle set 105, 106, 107, 108, 109
- Remove Screws D1, D2

THERMOSTAT BUSH 17

WATER TANK 18

- Remove Screw A
- Remove Backplate 3, 26
- Remove Inlay 7
- Remove Operation knobs 101, 102
- Remove Screws D1, D2
- Remove Handle 13
- Remove Screws E1, E2
- Remove Water tank 18
- Remove Screw F

SOLEPLATE COVER 19

ISOLATION PLUG 20

SOS SEAL 21

DOSING SEAL 22

SOLEPLATE ASSY 23

- Remove Screw A
- Remove Backplate 3, 26
- Remove Inlay 7
- Remove Operation knobs 101, 102
- Remove Screws D1, D2
- Remove Handle 13
- Remove Screws E1, E2
- Remove Water tank 18
- Remove Screw F
- Remove Heat shield
- Remove Screws G1, G2
- Remove Soleplate cover 19

REPAIR INSTRUCTIONS

- Due to the high voltage of the iron, ONLY the specified cordsets must be used.
- Thermostat (Pos 116) fitted to the soleplate (Pos 23) was pre-adjusted by the suppliers and secured by glue. To avoid mal-function of the iron, NEVER adjust the thermostat.
- No information about the type number and voltage is stamped onto the typeplate. When replacing the back plate (typeplate is at the bottom), engrave at least the type number & voltage on the typeplate with a sharp object.
- Parts with numbers from 103 and higher cannot be ordered separately.

OPTIONAL (accessories)

- No specific issues

Pos	Service code	Description	Consist of
1	4239 021 12290	Dial (French/Dutch text)	
	4239 021 12680	Dial (English/Spanish text)	
	4239 021 11850	Dial (German/Swedish text)	
	4239 021 12640	Dial (Spanish/Portuguese text)	
2	4239 014 53830	Rattle spring	
3	4239 026 05740	Back plate	
4	4239 000 06580	Cordset EU	
	4239 000 07840	Cordset UK	
	4239 000 06650	Cordset Swiss	
5	4239 022 54020	Ball swivel	112, 113
6	4239 021 03200	Filling door assembly	
7	4239 021 11870	Inlay printed	
8	4239 026 11060	SOS knob (metallic purple)	101
	4239 026 11070	Spray knob (metallic purple)	102
9	4239 021 03140	Lamp assembly	
10	4239 022 54030	Slide unit	103, 104
11	4239 022 54040	Needle set	105, 106, 107, 108, 109
12	4239 015 54400	Tank seal	
13	4239 021 11860	Handle printed	
14	4239 022 53431	Self clean button (Purple)	110, 111
15	4239 021 03040	Spray nozzle assembly	
16	4239 020 90560	Pump assembly	
17	4239 015 98410	Thermostat bush	
18	4239 021 17950	Water tank (Lilac)	114
19	4239 026 11040	Cover (light purple)	
20	4239 025 98250	Isolation stud	
21	4239 015 54410	SOS seal	
22	4239 015 54390	Dosing seal	
23	4239 021 20580	Soleplate assembly	115, 116
24	4239 026 01220	Lamp holder	
25	4239 026 05570	Lamp cover	
26	4239 026 11050	Back plate cover (Lilac)	
27	4239 026 05990	Filling cup	
28	4239 026 11080	Steam slider (Purple)	

